



Place fire boxes touching the sides and flush to the back of your fireplace.

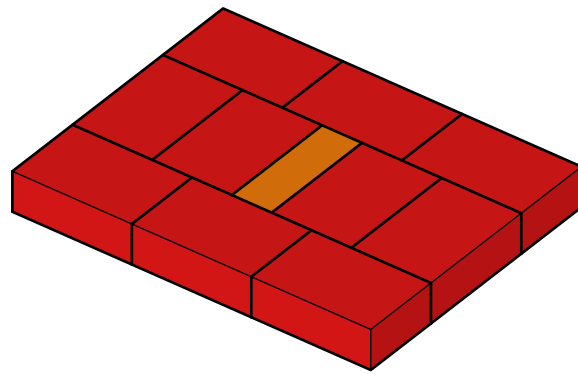

*Back side of fireplace*

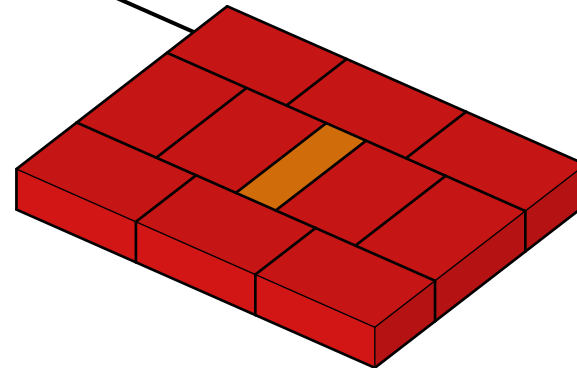



Lay out the first course of your kit. This is the "foundation" on which you will build your Wood Storage Boxes. Take time to make sure it is as perfect as possible. Be sure this course is level and square. Any mistakes made here will continue to show up as you build.

## WB-3628


Wood Storage Boxes

### REVISIONS

	MM/DD/YY	REMARKS
1	02/25/15	Simplified instructions using colored units. TP
2	06/04/15	2 SKU and QR update
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...

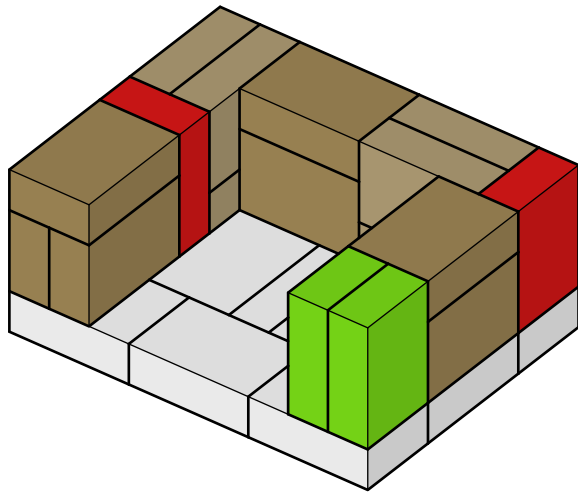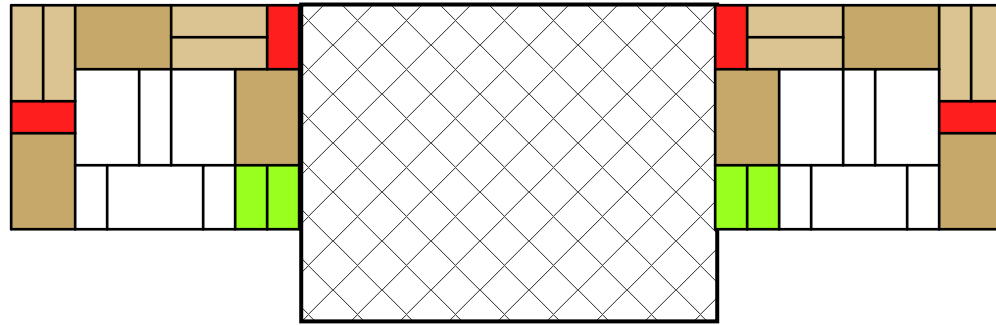

*Back side of fireplace*

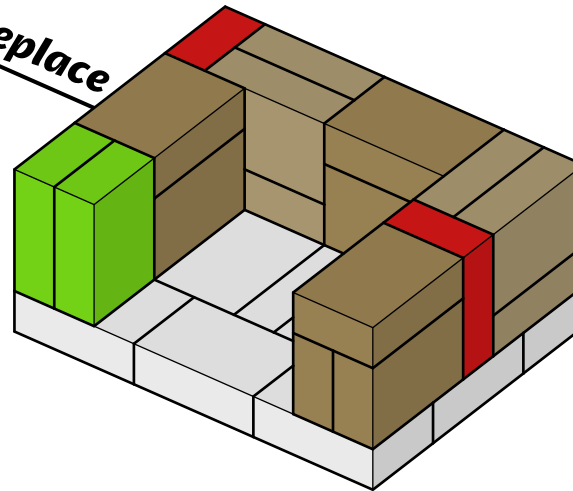



Remember: Just use a small bead of glue on each block. You don't want your blocks to "swim" due to too much glue. If some glue oozes out, DO NOT TRY TO CLEAN IT. You will only make a huge sticky mess. Wait for it to cure. Then, break or cut it away.

## WB-3628


Wood Storage Boxes

### REVISIONS

	MM/DD/YY	REMARKS
1	02/25/15	Simplified instructions using colored units. TP
2	06/04/15	2 SKU and QR update
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...

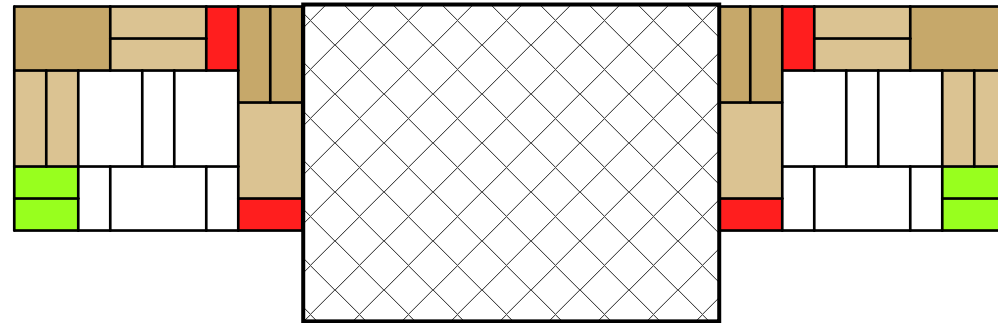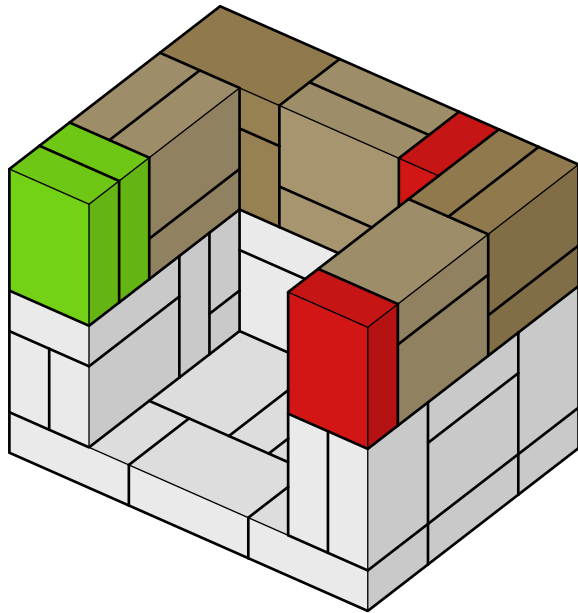

*Back side of fire*

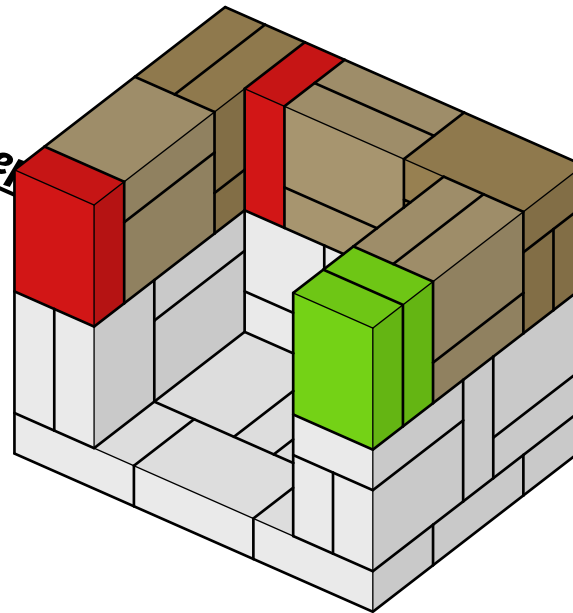

Remember: Just use a small bead of glue on each block. You don't want your blocks to "swim" due to too much glue. If some glue oozes out, DO NOT TRY TO CLEAN IT. You will only make a huge sticky mess. Wait for it to cure. Then, break or cut it away.


## WB-3628

Wood Storage Boxes


### REVISIONS

	MM/DD/YY	REMARKS
1	02/25/15	Simplified instructions using colored units. TP
2	06/04/15	2 SKU and QR update
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...

Before attempting to place these slabs, be sure that the adhesive on your boxes has fully cured. That way, they won't move out of place as you slide the top slab into position. Be sure to place the cut edge flush to your fireplace. Keep the back of the slab flush with the block to achieve an overhang in the front to better keep your wood dry. All the exposed edges should be rock-faced. Use coins, sand, or shims as needed to level the slabs.

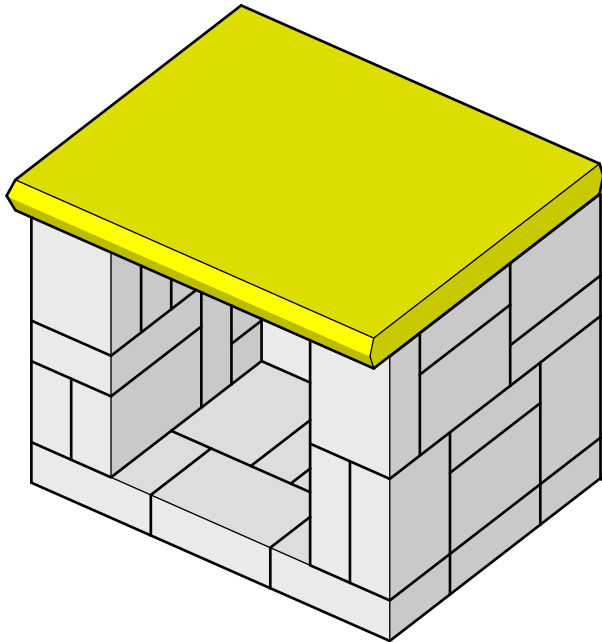

*Back side of fireplace*

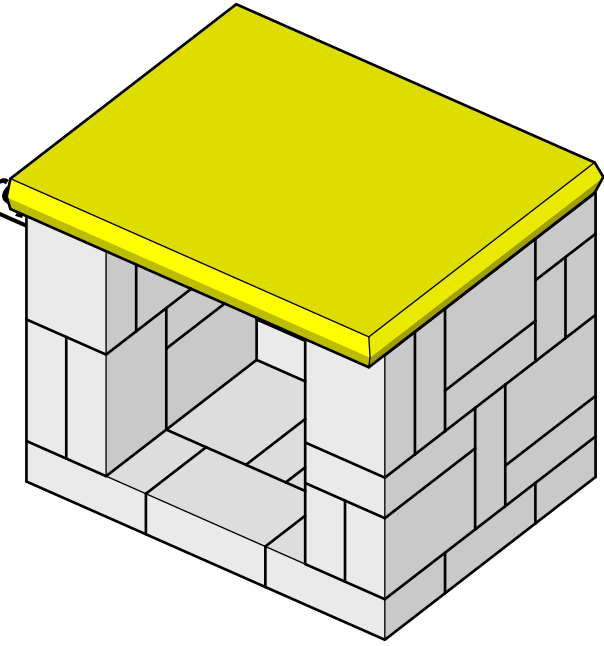

These Slabs are very heavy! Be sure to have plenty of help on hand. Always bend at your knees and wear gloves when handling these slabs.

**WB-3628**

Wood Storage Boxes

REVISIONS

	MM/DD/YY	REMARKS
1	02/25/15	Simplified instructions using colored units. TP
2	06/04/15	2 SKU and QR update
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...